
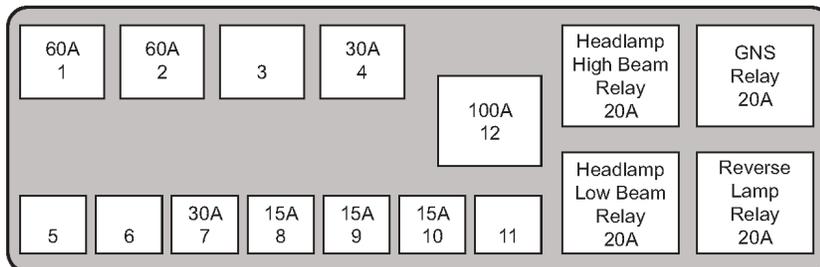




Fuse and Relay – localizado no compartimento do motor próximo a bateria.

Fuse No.	Fuse Rating	color	Circuit
1	60A	Yellow	Maxi Fuse 1
2	60A	Yellow	Maxi Fuse 2
3			
4	30A	Pink	EMS ECU Supply
5			
6			
7	30A	Pink	Cond. Fan
8	15A	Blue	High Beam on Head lamp
9	15A	Blue	Low Beam on Head lamp
10	15A	Blue	Horn
11			
12	100A	Blue	Charging System

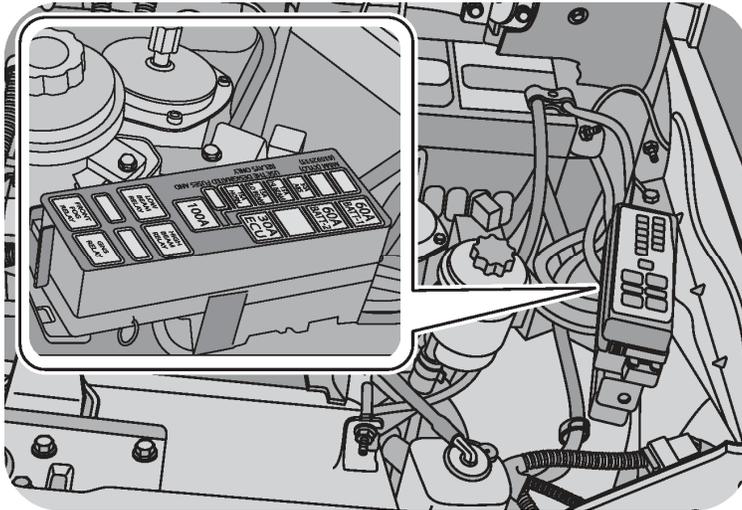


Localização – na lateral do painel de instrumentos

Fuse No.	Fuse Rating	color	Circuit
1	10A	Red	AC Comp.
2	15A	Blue	Fog Lamp/Heater *
3	10A	Red	Turn/Reverse
4	10A	Red	Wiper Washer Front
5	10A	Red	Wiper Washer Rear *
6			
7			
8	10A	Red	Rear ABS ECU *
9	15A	Blue	Cluster
10	15A	Red	Immobilizer/ECU
11	15A	Blue	Flasher Control
12	5A	Brown	Diag/Immobilizer *
13	10A	Red	Audio/Cluster *
14	10A	Red	Park Lamp
15	15A	Blue	Horn
16	10A	Red	Roof/Engine Lamp
17			
18			
19	20A	Yellow	CDL
20	30A	Green	Blower Fan
21	10A	Red	Audio
22	40A	Yellow	ACC.Cut Off Relay
23	30A	Yellow	Power Window *

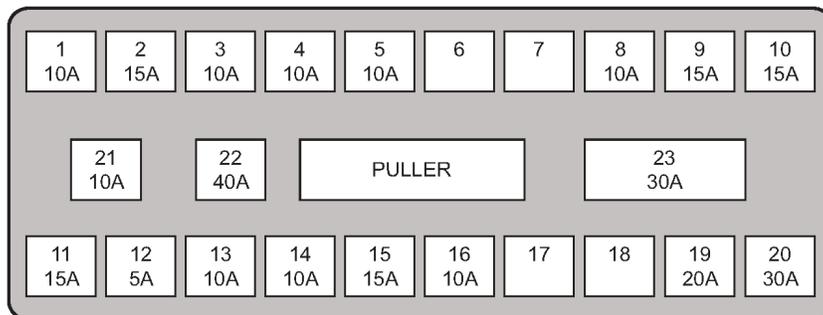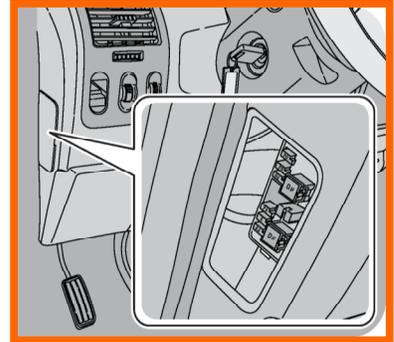

**ECU Fuse/Relay - Passenger Compartment
Location - Behind the glove box**

Fuse No.	Fuse Rating	Colour	Circuit
1	10A	Red	ECU Supply
2	15A	Red	EGR Actuator/IMV
3	10A	Blue	GNS Relay/ESS
4	15A	Blue	Feed Pump Relay
5	15A	Blue	Brake Main S/W
6	10A	Red	Cluster/AC ON
7	10A	Red	Spare
8	15A	Blue	Spare

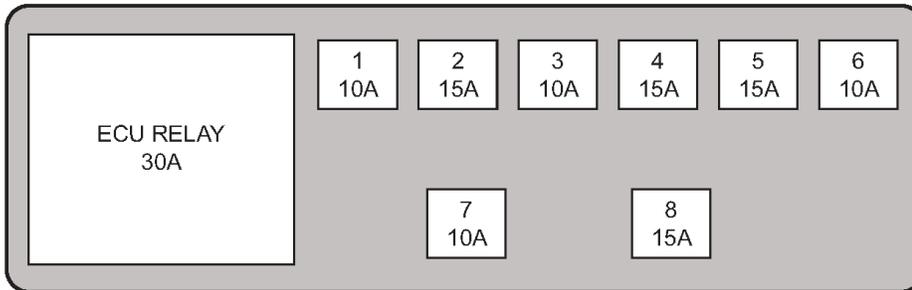

**Relay and Controller Identification - Passenger Compartment
Location - LHS A-Pillar**

